

HT330 Hand Strap



Adjust the tightness of hand strap according to your palm circumference

1. Grab one side of the hand strap and tear open towards yourself.



Quick Start Guide

V1.0

2. Grab the middle of the hand strap, and pull down the hand strap to adjust tightness.



3. Paste the hand strap back after adjusting.



<http://www.ute.com/>